



*Installation, Operation, and
Maintenance Manual*

*Welker[®] Optional Camera Kit Assembly
Appendix A
WelkerScope[®] LITE*

The information in this manual has been carefully checked for accuracy and is intended to be used as a guide for the installation, operation, and maintenance of the Welker equipment described above. Correct operating and/or installation techniques, however, are the responsibility of the end user. Welker reserves the right to make changes to this and all products in order to improve performance and reliability.

13839 West Bellfort
Sugar Land, Texas 77498-1671
U.S.A.
Tel.: (800) 776-7267
Tel.: (281) 491-2331
Fax: (281) 491-8344
www.welkereng.com

Welker[®], Welker Jet[®], and WelkerScope[®] are Registered Trademarks owned by Welker.

This page left blank intentionally.

INSTALLATION

1. GENERAL

1.1 Introduction

We appreciate your business and your choice of Welker products. The installation, operation, and maintenance liability for this product becomes that of the purchaser at the time of receipt. Reading the applicable *Installation, Operation, and Maintenance (IOM) Manual* prior to installation and operation of this equipment is required for a full understanding of its application and performance prior to use. If you have any questions, please call 1-800-776-7267 in the USA or 1-281-491-2331.

The following procedures have been written for use with standard Welker parts and equipment. Assemblies that have been modified may have additional requirements and specifications that are not listed in this manual.

Notes, Warnings, and Cautions



NOTE

Notes emphasize information or set it off from the surrounding text.



CAUTION

Caution messages appear before procedures that, if not observed, could result in damage to equipment.



WARNING

Warnings alert users to a specific procedure or practice that, if not followed correctly, could cause personal injury.

1.2 Description of Product

The Welker Optional Camera Kit Assembly is a lens adapter and adjustable lens that is an optional accessory for the WelkerScope LITE.



NOTE

Camera Kit should come pre-assembled from the factory. The following instructions are provided in the event the user should decide to disassemble the kit for inspection or cleaning purposes. These instructions may also be used as a guide to inspect the assembly in case it became loose during shipment.



INSTALLATION

2. INSTALLATION INSTRUCTIONS

2.1 General

After unpacking the unit, check it for compliance and for any damages that may have occurred during shipment.

N NOTE

Claims for damages caused during shipping must be initiated by the receiver and directed to the shipping carrier. Welker is not responsible for any damages caused from mishandling by the shipping company.

2.2 Assembly Instructions



Figure 1 - Adapter Tube Assembly

1. *Assembling the adapter:*

Attach the adapter tube (Figure 2), to the adapter ring (Figure 3). The female threads are on the wide lip of the adapter tube (Figure 2), and the male threads are on the narrow lip of the adapter ring (Figure 3).

! CAUTION

The threading for these two parts is very narrow. Make sure to align the threads properly and to screw the pieces together slowly. If the threads are not properly aligned and they are screwed together too quickly, they could be stripped.

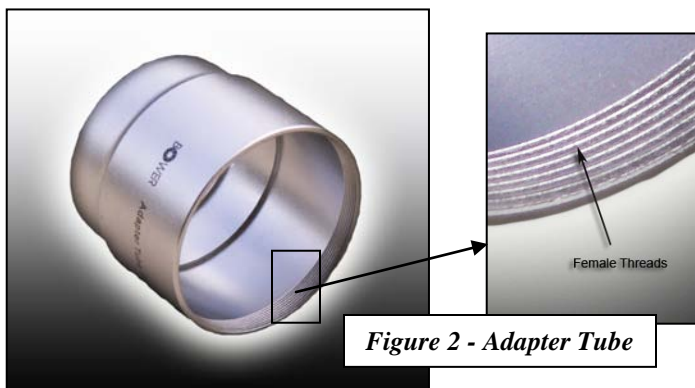


Figure 2 - Adapter Tube



Figure 3 - Adapter Ring

INSTALLATION

2.2 Assembly Instructions (Continued)

2. *Assembling the adjustable lens:*

- Loosen the adjustment screw on the adjustment cylinder so the screw is almost flush with the inner wall of the cylinder (Figure 4).
- Place the lens (Figure 5) inside the adjustment cylinder, making sure the adjustment screw on the cylinder is aligned to the alignment groove on the lens.
- Position lens at desired focus point, and then tighten alignment screw securely to hold lens in position (Figure 6).



Figure 4 - Adjustment Cylinder



Figure 5 - Lens



Figure 6 - Lens Assembly

3. *Attaching the lens assembly to the adapter assembly.*

- Loosen the three screws on the ring section of the adapter assembly so that they are flush with the inner wall of the ring (Figure 7).
- Set the adapter assembly on a flat surface ring side up (Figure 7) in order to insure proper alignment of the assembly.
- Set lens assembly inside adapter assembly lining up the three screws to the three holes (Figure 6 & 7).
- Tighten screws.



Figure 7 - Adapter Assembly

4. *Optional Camera Kit is now assembled and ready for attachment to WelkerScope® Lite).*

INSTALLATION

3. MAINTENANCE

It is recommended the following instructions are followed periodically or when necessary in order to clean the glass lens inside the unit.

3.1 Disassembly Instructions

1. *Detach the lens assembly from the adapter assembly.*
 - Loosen the three screws on the adapter ring (See Figure 7 in Section 2).
 - Detach lens assembly from adapter assembly (See Figure 6 in Section 2).
2. *Detach the lens from the adjustment cylinder.*
 - Loosen the set screw on the adjustment cylinder (See Figure 4 in Section 2).
 - Detach lens (See Figure 5 in Section 2) from adjustment cylinder.

3.2 Maintenance

1. *Cleaning the glass lens.*

After disassembling the unit, the glass lens will now be accessible for cleaning. Use a non-abrasive cloth and a smudge-proof lens cleaner to remove any residue from the lens.
2. *Re-assembling the camera kit.*

Follow instructions in Section 2.2, begin at step 2 (see page 5), to re-assemble and re-install the camera kit.



13839 West Bellfort, Sugar Land, Texas 77498-1671

Phone: (281) 491-2331

Fax: (281) 491-8344

Toll Free: (800) 776-7267

Web Page: www.welkereng.com